




# Application Note 11    **3 Series Mounting Nose**

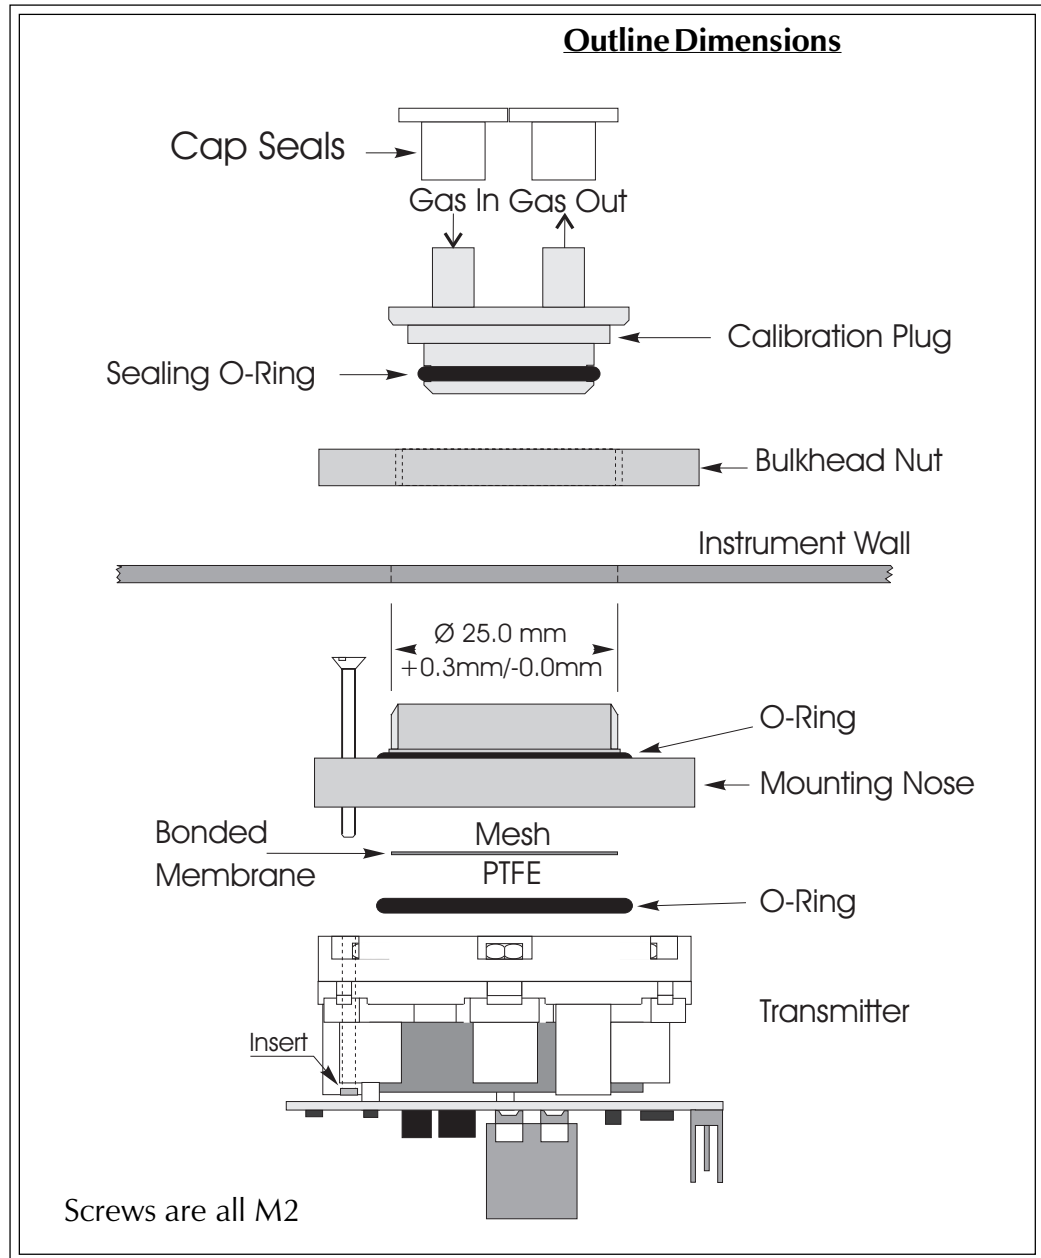

A diffusion mounting assembly, the 'nose' adaptor, has been designed for convenient mounting in a wide range of weatherproof housings. Moulded in resilient polyester, the nose adaptor requires a 25mm diameter hole in the outside wall of the housing to allow installation. The Mounting Nose also features the calibration plug for easy zeroing and exposure to calibration gas. A bonded membrane and mesh is employed to prevent the ingress of dirt and dust particles into the CiTiceL.

Order Code:    Mounting Nose.....B020